



TRAFFICLOUD[®] SIGN MANAGER

Description

- Software used to set up, configure, update, and troubleshoot ATS Shield, SpeedAlert and InstAlert signs
- Traffic Data files may be downloaded from the signs, stored, and uploaded to the TrafficCloud platform for analysis
- A Message Library is provided to store messages for use on multiple signs
- Messages may be uploaded or downloaded from users' TrafficCloud library
- Picture Management tab allows downloading, viewing, and printing of images from signs with image capture

Security

- Signs are protected via customer account specific license keys
- Settings are read-only without license
- Users of ATS TrafficCloud may log in to download the license key automatically. (Internet connection required)
- Guest users can be provided with a license for a specific device only

Minimum Requirements

- Windows 7 or newer OS
- NET Framework 4.0 or later (will install automatically with application if needed)
- USB 2.1 or Bluetooth 2.0
- Internet access recommended (required for license verification and synchronizing data and messages to TrafficCloud)
- PC with 1GHz processor, 512MB RAM, and 4.5GB of disk space.
- Display with 1024x768 resolution minimum



SETTING SINGLE MESSAGE



CAPTURE IMAGES



SET SPEED-DEPENDENT MESSAGES



MONITOR SIGNS